



- 01—ENGINE
- 02—CLUTCH, PEDAL and TORQUE CONVERTER
- 03—FUEL SYSTEM
- 04—EXHAUST
- 05—COOLING
- 06—ELECTRICAL
- 07—TRANSMISSION — STANDARD and OVERDRIVE
- 08—TRANSMISSION — AUTOMATIC
- 09—PROPELLER SHAFT

- 10—REAR AXLE
 - 11—BRAKES
 - 12—FRONT AXLE
 - 13—STEERING
 - 14—WHEELS
 - 15—FRAME and SPRINGS
 - 16—FENDERS, HOOD and SHEET METAL
 - 17—SPEEDOMETER and INSTRUMENTS
 - 18—SHOCK ABSORBER, BUMPERS and TOOLS
- } Illustrated
In Group

INDEX OF MAJOR GROUPS and SUB-GROUPS
ALSO QUICK REFERENCE INDEX OF ILLUSTRATIONS

INDEX OF MAJOR GROUPS and SUB-GROUPS ALSO QUICK REFERENCE INDEX OF ILLUSTRATIONS

ILLUSTRATED
ON PAGEILLUSTRATED
ON PAGE**01- ENGINE GROUP**

0100 ENGINE ASSEMBLY	0,1,8
0101 ENGINE MOUNTINGS.	0,1,2,4,9,10,247,248
0102 CYLINDER BLOCK, HEAD AND GASKET	0,1,2,4,13
0103 VALVES AND VALVE MECHANISM.	2,3,4,5
0104 CAMSHAFT AND BEARINGS, GEAR AND COVER	2,3,4,5
0105 CRANKSHAFT, BEARINGS, CAPS, GEAR AND DAMPER.	3,5,10
0106 FLYWHEEL AND STARTER GEAR	3,5
0107 CONNECTING RODS AND BEARINGS.	3,5
0108 PISTONS, PINS AND RINGS	3,5
0109 INLET AND EXHAUST MANIFOLDS AND HEAT CONTROL.	2,4,6
0115 OIL PAN, GASKETS, FILLER AND LEVEL GAGE.	2,4,23
0116 OIL PUMP, STRAINER AND PRESSURE GAGE PIPES.	2,4,7
0117 OIL PRESSURE RELIEF VALVE	2,4
0118 OIL FILTER AND PIPES.	2,4,25

02- CLUTCH, PEDAL and TORQUE CONVERTER GROUP

0201 CLUTCH DRIVEN PLATE WITH FACINGS.	27,28
0202 COVER, PRESSURE PLATE AND SPRINGS	27,28
0203 RELEASE BEARING, SHAFT AND LEVERS	27,28
0204 CLUTCH PEDAL AND SPRING	27,28
0205 PEDAL SHAFT	27,28
0206 CLUTCH OPERATING SHAFT AND RODS	27,28,31
0207 PILOT BEARING	3,5
0209 CLUTCH AND FLYWHEEL HOUSING	2,4
0220 TORQUE CONVERTER.	33
0230 TORQUE CONVERTER HOUSING.	33

03- FUEL SYSTEM GROUP

0301 FUEL PUMP.	35,36,37
0302 CARBURETER.	0,1,35,36,38,48,51,54,57
0303 CARBURETER AIR CLEANER.	0,1,35,36
0305 GOVERNOR.	--
0307 GASOLINE TANK, GAGE AND MOUNTINGS	35,36
0308 FUEL (GASOLINE) LINES AND CONNECTIONS	35,36
0312 ACCELERATOR AND THROTTLE CONTROLS.	39,40,41,42,43,44

04- EXHAUST GROUP

0401 EXHAUST PIPE AND SUPPORTS	71,72
0402 MUFFLER AND SUPPORT	71,72
0403 MUFFLER OUTLET PIPE AND HANGERS	71,72,74

05- COOLING GROUP

0501 RADIATOR CORE AND FILLER CAP.	77,78,79,80
0502 RADIATOR GRILLE	81,82,83,84
0503 RADIATOR MOUNTINGS.	77,78,79,80
0504 THERMOSTAT.	2,4,77,78,79,80
0505 WATER PUMP.	2,4,77,78,79,80
0506 FAN AND BELT.	77,78,79,80,89
0507 RADIATOR AND WATER PUMP HOSE AND CONNECTIONS	77,78,79,80

06- ELECTRICAL GROUP

0601 IGNITION DISTRIBUTOR, CONDENSER AND SPARK ADVANCE MODIFIER.	91,92,93,94,95,96
---	-------------------

06- ELECTRICAL GROUP-Cont'd.

0602 IGNITION COIL, SWITCH AND LOCK.	91,92,93,94
0603 SPARK PLUG AND DISTRIBUTOR CABLES	0,1,2,4
0606 STARTER MOTOR	91,92,93,94,97,98
0607 STARTER SWITCH.	91,92,93,94,97,98
0608 GENERATOR AND REGULATOR	91,92,93,94,99,100,101
0610 STORAGE BATTERY	91,92,93,94
0615 LIGHT SWITCHES - LIGHTING, INSTRUMENTS, HEAD LAMP DIMMER AND STOP LAMP.	91,92,93,94
0617 HEAD AND PARKING LAMPS.	91,92,93,94,102,103
0619 TAIL AND STOP LAMP.	91,92,93,94,104,105
0620 LICENSE PLATE LAMP.	91,92,93,94
0621 DIRECTIONAL LAMPS	106,107,108
0622 LICENSE PLATE BRACKETS.	283,284
0625 HORN.	91,92,93,94
0627 CHASSIS WIRING, JUNCTION BLOCK, CIRCUIT BREAKERS.	91,92,93,94
0630 BATTERY AND STARTING CABLES AND GROUND STRAPS	91,92,93,94
0631 FOG LAMPS	132,134
0632 BACK-UP LAMP.	109
0633 SPOTLIGHTS.	136

07- TRANSMISSION - STANDARD and OVERDRIVE GROUP

0700 TRANSMISSION ASSEMBLY	138,145
0701 TRANSMISSION CASE	138
0702 TRANSMISSION MAIN SHAFT, GEARS AND BEARINGS.	138,139
0703 TRANSMISSION COUNTERSHAFT, GEARS AND BEARINGS.	138,148
0704 TRANSMISSION REVERSE IDLER GEAR AND SHAFT	138
0705 TRANSMISSION MAIN DRIVE PINION AND BEARINGS.	138
0720 OVERDRIVE HOUSING	139
0721 OVERDRIVE SHAFT AND BEARINGS.	139
0722 OVERDRIVE FREE WHEELING (FW) CAM.	139
0725 OVERDRIVE SHIFT	139
0728 OVERDRIVE PINION CAGE	139
0729 OVERDRIVE STATIONARY OR SUN GEAR.	139
0731 OVERDRIVE CUT-OUT CONTROL	139,140,141
0732 OVERDRIVE CONTROL - ON DASH	140,141
0745 TRANSMISSION UNIVERSAL JOINT FLANGE	138,139
0747 GEARSHIFT FORKS AND LEVERS.	142,143,144
0756 GEARSHIFT HAND LEVER AND SHAFT	142,143,144,154
0759 GEARSHIFT CROSS SHIFT	142,143,144
0760 GEARSHIFT RODS.	142,143,144,158
0761 GEARSHIFT CROSS SHAFT - RHC	158

08- TRANSMISSION - AUTOMATIC GROUP

0800 AUTOMATIC (AD.) TRANSMISSION.	--
0801 EXTENSION OR GOVERNOR HOUSING	159
0802 FRONT PUMP OR COLLECTOR RING.	160
0803 VALVE BLOCK	161
0804 GEAR SET OR MAIN SHAFT ASSEMBLY	160
0806 SERVO UNITS	162
0807 SERVO BANDS	162
0808 TRANSMISSION CASE	161,162
0847 TRANSMISSION UNIVERSAL JOINT FLANGE	159,160
0850 HAND CONTROL SELECTOR LEVER AND SHAFT	163,164
0853 HAND CONTROL STARTER CUT-OUT AND BACK-UP LAMP SWITCH	163,164,174
0854 HAND CONTROL RODS AND BELL CRANK.	163,164

INDEX OF MAJOR GROUPS and SUB-GROUPS

ALSO QUICK REFERENCE INDEX OF ILLUSTRATIONS

ILLUSTRATED
ON PAGEILLUSTRATED
ON PAGE**09- PROPELLER SHAFT GROUP**

0900 PROPELLER SHAFT	177
0901 UNIVERSAL JOINT	177,178
0902 PROPELLER SHAFT SUPPORT	177

10- REAR AXLE GROUP

1000 REAR AXLE ASSEMBLIES.	181,182
1001 REAR AXLE HOUSING	181,182
1002 REAR AXLE SHAFT AND BEARINGS.	181,182
1003 DIFFERENTIAL CARRIER.	181,182
1004 DIFFERENTIAL CASE AND BEARINGS.	181,182
1005 REAR AXLE BEVEL DRIVE GEAR, PINION AND BEARINGS.	181,182
1006 REAR AXLE UNIVERSAL JOINT FLANGE.	181,182

11- BRAKES GROUP

1101 WHEEL BRAKE SHOES, LININGS, ECCENTRICS ETC.	187,188,193
1102 WHEEL BRAKE BACKING PLATES.	187,188
1103 WHEEL BRAKE CYLINDER.	187,188,196
1104 BRAKE MASTER CYLINDER	198,199
1105 NoRoL UNIT.	200
1106 ANTI-CREEP SOLENOID VALVE, SWITCH AND CABLE.	159,160,190,192
1107 BRAKE PIPES, HOSE AND FITTINGS	189,190,191,192,203
1108 BRAKE PEDAL.	189,190,191,192,203
1109 BRAKE RODS	189,190,191,192,203
1110 BRAKE CABLES	189,190,191,192,203
1116 HAND OR PARKING BRAKE.	189,190,191,192,209

12- FRONT AXLE GROUP

1202 STEERING KNUCKLE AND ARM	211,212
1203 STEERING KNUCKLE KING PIN AND BEARINGS	211,212
1204 STEERING KNUCKLE CONTROL ARM	211,212
1205 STEERING KNUCKLE CONTROL ARM STABILIZER.	218
1207 STEERING KNUCKLE TIE ROD AND ENDS.	213
1209 STEERING BELL CRANK AND LEVER.	213

13- STEERING GROUP

1301 STEERING GEAR.	221,222,223
1302 STEERING GEAR HOUSING AND COVERS	221,222,223
1304 STEERING GEAR POST AND CAM	221,222,223
1305 STEERING GEAR POST JACKET AND BRACKET.	225
1306 STEERING GEAR CAM LEVER SHAFT.	221,222,223
1307 STEERING GEAR PITMAN ARM AND ADAPTER.	221,222,223
1308 POWER CYLINDER, ADAPTER, PISTON, RACK, PIPES ETC.	223,224
1309 STEERING GEAR PUMP, PULLEYS, BELTS ETC.	223,224
1310 STEERING WHEEL, HORN PUSH BUTTON, RING, CABLE ETC.	226,227
1312 STEERING REACH ROD OR DRAG LINK.	213

14- WHEELS GROUP

1402 WHEELS, HUBS AND DRUMS.	243
1407 FRONT WHEEL BEARINGS, NUTS, ETC.	243
1408 FRONT WHEEL GREASE WASHERS.	243
1409 WHEEL HUB COVERS OR CAPS.	243
1413 REAR COMPARTMENT WHEEL CARRIER.	--

15- FRAME AND SPRINGS GROUP

1500 FRAME ASSEMBLY.	247,248
1501 FRAME CROSS MEMBERS	247,248
1505 REAR SPRING HANGERS	247,248,249
1507 FRAME MISCELLANEOUS ATTACHMENTS	247,248
1510 FRONT SPRINGS	249
1518 REAR SPRINGS.	249
1519 REAR SPRING BOLT.	249
1520 REAR SPRING SHACKLE	249
1521 REAR SPRING BUMPER.	249
1522 REAR SPRING CLIP, PLATE AND SEAT.	249
1525 REAR STABILIZER	253

16- FENDERS, HOODS, MISC. SHEET METAL GROUP

1601 FRONT FENDER.	255,256,257,258
1602 FRONT FENDER BOLTS, NUTS AND WASHERS.	--
1604 REAR FENDER	255,256,257,258
1605 REAR FENDER BOLTS, NUTS AND WASHERS	--
1609 FRONT FENDER TO BUMPER SPLASHGUARD.	255
1610 REAR BUMPER GRAVEL DEFLECTOR.	255,256,257,258
1620 HOOD ASSEMBLY	255,256,257,258
1622 HOOD LOCKS.	255,256,257,258

17- SPEEDOMETERS AND INSTRUMENTS GROUP

1701 INSTRUMENT PANEL.	269,270,271,272,273
1702 COMBINATION OIL GAGE, AMMETER, GASOLINE GAGE AND RADIMETER	272
1705 COMBINATION OIL GAGE AND RADIMETER	270,271
1707 OIL PRESSURE GAGE	269,270,271,272,273
1709 AMMETER	269,270,271,272,273
1712 COMBINATION GASOLINE GAGE AND AMMETER	270,271
1713 GASOLINE GAGE	169,170,271,272,273
1714 RADIMETER OR WATER TEMPERATURE INDICATOR	269,270,271,272,273
1716 SPEEDOMETER AND DRIVE PARTS	269,270,271,272,273
1718 CLOCK	--

18- SHOCK ABSORBERS, BUMPERS AND GUARDS GROUP

1801 SHOCK ABSORBERS	281
1803 FRONT BUMPERS	282,283,284
1805 REAR BUMPERS.	282,283,284
1807 BUMPER GUARDS OR VERTICAL BUMPERS	285,286
1809 WINGUARDS	285,286
1812 TOOLS	293