

ALPHABETICAL INDEX

GROUP

A

ADAPTER, SOLENOID VALVE TO MASTER CYLINDER	1106
ADAPTER, STEER. GEAR POWER CYLINDER	1308
ADAPTER, WATER TEMPERATURE GAGE	0102
ADJUSTING SCREW, OD KICK DOWN SWITCH.	0312
AIR CLEANER, CARBURETER	0303
AIR DEFLECTOR, UPPER RADIATOR	0502
AIR INTAKE AND SCREEN, CONVERTER HOUSING.	0230
AMMETER	1709
ANTI-RATTLER, HOOD TIE ROD.	1620
ANTI-SQUEAK, HOOD TOP HINGE TO BODY	1620
ANTI-SQUEAK, STEER. POST JACKET BRACKET	1305
ARM, AUTO. TRANS. DIRECT DRIVE PAWL RELEASE ROCKER	0801
ARM, ENGINE VALVE ROCKER.	0103
ARM, FUEL PUMP ROCKER	0301
ARM, GENERATOR ADJUSTING.	0608
ARM, GENERATOR BRUSH.	0608
ARM, STEER. GEAR PITMAN	1307
ARM, STEER. KNUCKLE	1202
ARM, STEER. KNUCKLE CONTROL	1204
ARMATURE, GENERATOR	0608
ARMATURE, STARTER MOTOR	0606
AXLE ASSEMBLY, REAR	1000

B

BACK-UP LAMP KIT.	0632
BAFFLE, ENGINE VALVE CHAMBER OIL.	0103
BAFFLE, TRANS. MAIN SHAFT OIL	0702
BAIL, FUEL PUMP BOWL.	0301
BALANCE, MANIFOLD HEATER VALVE.	0109
BALL, AUTO. TRANS. VALVE BLOCK SELECTOR VALVE DETENT.	0803
BALL CHECK, AUTO. TRANS. VALVE BLOCK BASE PLATE	0803
BALL CHECK, AUTO. TRANS. VALVE BLOCK MANIFOLD PLATE.	0803
BALL JOINT, ACCELERATOR CROSS SHAFT TO TRANS. ROD.	0312
BALL JOINT, AUTO. TRANS. TO BELL CRANK CONTROL ROD	0850
BALL, STEER. GEAR POST CAM BEARING.	1304
BALL, STEER. GEAR SHAFT AND WORM BALL NUT BEARING	1304
BALL STUD, THROTTLE CONTROL BELL CRANK TO CARBURETER ROD	0312
BAND AND LINING, AUTO. TRANS. BRAKE	0807
BAR ASSEMBLY, RADIATOR GRILLE	0502
BAR, FRONT BUMPER INNER SUPPORT	1803
BAR, FRONT BUMPER OUTER FACE.	1803
BAR, RADIATOR GRILLE.	0502
BAR, REAR BUMPER INNER SUPPORT.	1805
BAR, REAR BUMPER OUTER FACE	1805
BASE, DIRECTIONAL SIGNAL LIGHTS SWITCH.	0620
BASE, DISTRIBUTOR TIMER	0601
BASE, FOG LAMP SEALED BEAM UNIT MOUNTING.	0631
BASE, HEAD LAMP SEALED BEAM UNIT MOUNTING	0617
BATTERY, STORAGE (DRAINED).	0610
BEARING, AUTO. TRANS. GOVERNOR.	0801
BEARING, AUTO. TRANS. MAINSHAFT REAR.	0804
BEARING, CLUTCH PILOT	0207
BEARING, CRANKSHAFT	0105
BEARING, GENERATOR DRIVE END PLATE.	0608
BEARING, PROPELLER SHAFT SUPPORT.	0902
BEARING, STARTER MOTOR INTERMEDIATE	0606
BEARING, STEER. GEAR PUMP DRIVE SHAFT	1309
BEARING, STEER. KNUCKLE	1202
BEARING, STEER. KNUCKLE THRUST.	1203
BEARING, STEER. POST.	1305
BEARING, STEER. POST JACKET	1305
BEARING, THRUST, STEER. GEAR SHAFT AND WORM	1304
BEARING, TRANS. MAIN SHAFT REAR	0702
BEARING, TRANS. OVERDRIVE SHAFT	0721

B-Cont'd.

GROUP

BEARING, UNIVERSAL JOINT CROSS.	0901
BEARING AND COLLAR, CLUTCH RELEASE.	0203
BEARING AND RETAINER KIT, CLUTCH OPERATING SHAFT	0206
BEARING SET, CAMSHAFT	0104
BEARING SET, CRANKSHAFT	0105
BEARING UNIT, CONNECTING ROD.	0107
BELL CRANK, ACCELERATOR CONTROL	0312
BELL CRANK, AUTO. TRANS. HAND CONTROL	0850
BELL CRANK, THROTTLE CONTROL.	0312
BELT, FAN	0506
BELT, STEER. GEAR PUMP DRIVE.	1309
BENDIX DRIVE COMPLETE	0606
BEZEL, CLOCK.	1718
BEZEL, GASOLINE GAGE AND AMMETER.	1712
BEZEL, IGNITION SWITCH.	0602
BEZEL, INSTRUMENTS MOUNTING CASE.	1702
BEZEL, INSTRUMENTS PANEL.	1701
BEZEL, OIL GAGE AND RADIMETER	1705
BEZEL, SPEEDOMETER.	1716
BLADES, FAN	0506
BLOCK, CYLINDER	0102
BLOCK, OIL PAN FILLER	0115
BLOCKING RING, TRANS. SECOND AND HIGH SYNCHRONIZER	0702
BODY AND GEARS, AUTO. TRANS. FRONT PUMP	0802
BODY AND VALVES, AUTO. TRANS. VALVE BLOCK CONVERTER AND REVERSE INTERLOCK.	0803
BODY, AUTO. TRANS. PUMP RELIEF VALVE.	0803
BODY, CARBURETER CHOKE.	0302
BODY, CARBURETER THROTTLE	0302
BODY, HEAD LAMP	0617
BODY, STEER. GEAR PUMP.	1309
BODY, TAIL LAMP	0619
BODY, WATER PUMP.	0505
BOLT, CONNECTING ROD CAP.	0107
BOLT, GENERATOR FRAME THRU.	0608
BOLT, LICENSE PLATE	0622
BOLT, REAR SPRING	1519
BOLT, SPARE WHEEL HOLD DOWN	1413
BOLT, STARTER MOTOR FRAME THRU.	0606
BOOT, FOG LAMP FOCUSING SCREW	0631
BOOT, HAND BRAKE CABLE.	1110
BOOT, MASTER CYLINDER	1104
BOOT, TRANS. OVERDRIVE CONTROL GOVERNOR	0731
BOOT, WHEEL BRAKE CYLINDER.	1103
BOWL, FUEL PUMP	0301
BOX, STORAGE BATTERY.	0610
BRACE, CLUTCH OPERATING SHAFT BRACKET SUPPORT.	0206
BRACE, GRILLE PANEL TO AIR INTAKE	0502
BRACE, GRILLE PANEL TO APRON.	0502
BRACE, FOG LAMP	1807
BRACE, FRONT FENDER	1601
BRACE, LOWER TO UPPER GRILLE BAR.	0502
BRACE, REAR FENDER.	1604
BRACE, STEER. POST BRACKET TO COWL.	1305
BRACKET, ACCELERATOR CONTROL LEVER.	0312
BRACKET, AUXILIARY LIGHTING CIRCUIT BREAKER	0627
BRACKET, AUTO. TRANS. HAND CONTROL SHAFT.	0850
BRACKET, BACK-UP LAMP SWITCH.	0632
BRACKET, BODY MOUNTING.	1507
BRACKET, BRAKE PIPE HOSE.	1107
BRACKET, CLUTCH OPERATING SHAFT SUPPORT	0206
BRACKET, DIRECTIONAL SIGNAL LIGHTS FLASHER.	0621
BRACKET, ENGINE FRONT SUPPORT	0101
BRACKET, ENGINE VALVE ROCKER ARM SHAFT.	0103
BRACKET, FOG LAMP	0631
BRACKET, FRAME ENGINE FRONT SUPPORT	0101
BRACKET, FRONT LICENSE PLATE SUPPORT.	0622
BRACKET, GENERATOR SUPPORT.	0608
BRACKET, HORN	0625
BRACKET, IGNITION COIL.	0602

ALPHABETICAL INDEX

B-Cont'd.	GROUP	B-Cont'd.	GROUP
BRACKET, MUFFLER AND BODY SUPPORT	0402	BUSHING, TRANS. REVERSE IDLER GEAR.	0704
BRACKET, NOROL AND STOP LAMP FRAME SUPPORT.	1105	BUTTON, TAIL LAMP REFLECTOR	0619
BRACKET, OIL FILTER	0118	BUTTON AND WIRE, TRANS. OVERDRIVE CONTROL	0732
BRACKET, OIL FILTER INLET PIPE TO CYL. HEAD	0118	BUTTON W/EMBLEM, HORN PUSH.	1310
BRACKET, OUTLET PIPE HANGER	0403		
BRACKET, RADIATOR GRILLE BAR.	0502	C	
BRACKET, REAR FENDER BRACE.	1604	CABLE, ANTI-CREEP CONTROL WIRING.	1106
BRACKET, REAR LICENSE PLATE SUPPORT	0622	CABLE, BATTERY GROUND	0630
BRACKET, REAR STABILIZER SHAFT BUSHING.	1525	CABLE, BATTERY TO STARTER SWITCH.	0630
BRACKET, SIGNAL LIGHTS SWITCH PLATE PAWL.	0621	CABLE, CHASSIS CABLES TO JUNCTION BLOCK	0620
BRACKET, SPARK PLUG CABLES.	0603	CABLE, CHASSIS CABLE TO OVERDRIVE RELAY	0731
BRACKET, SPRING	1620	CABLE, DIRECTIONAL SIGNALS LIGHTS FLASHER	0621
BRACKET, STEER. GEAR MOUNTING	1301	CABLE, DISTRIBUTOR CONTACT ARM.	0601
BRACKET, STEER. GEAR PUMP SUPPORT	1309	CABLE, DISTRIBUTOR GROUND	0601
BRACKET, STEER. POST GEARSHIFT SHAFT.	0756	CABLE, DISTRIBUTOR TO COIL HIGH TENSION	0603
BRACKET, STEER. POST JACKET	1305	CABLE, DIRECTIONAL SIGNAL LIGHTS TO FLASHER	0621
BRACKET, STOP LAMP SWITCH AND NOROL FRAME SUPPORT.	1105	CABLE, DISTRIBUTOR TO COIL LOW TENSION.	0603
BRACKET, SUSPENSION UPPER ARM	1507	CABLE, FOG LAMP SWITCH TO AMMETER	0631
BRACKET, TRANS. OVERDRIVE ACCELERATOR KICKDOWN SWITCH.	0731	CABLE, FOG LAMP SWITCH TO LIGHT SWITCH.	0631
BRACKET, TRANS. OVERDRIVE CONTROL CONDUIT SUPPORT.	0732	CABLE, GENERATOR TO VOLTAGE REGULATOR	0627
BRACKET W/CLIP, HOOD TOP PROP HOLDER.	1620	CABLE, HEAD LAMP CONNECTOR.	0617
BRAKE CYLINDER, WHEEL	1103	CABLE, HIGH TENSION	0603
BRAKE CYLINDER ASSEMBLY, REVERSE, AUTO. TRANS.	0806	CABLE, HORN TO RELAY.	0625
BRAKE PIPES	1107	CABLE, HORN PUSH BUTTON	1310
BREATHER, STEER. GEAR HOUSING	1302	CABLE, HORN PUSH BUTTON CABLE TO CHASSIS CABLES CONNECTOR	1310
BRUSH, GENERATOR.	0608	CABLE, LICENSE PLATE LAMP	0620
BRUSH, HORN PUSH BUTTON CABLE CONTACT RING.	1310	CABLE, PARKING AND SIGNAL LAMP.	0617
BRUSH, STARTER MOTOR.	0606	CABLE, PARKING LAMP	0617
BRUSH SET, GENERATOR.	0608	CABLE, STARTER CUT-OUT SWITCH TO MOTOR.	0607
BULB, AUTO. TRANS. HAND CONTROL SELECTOR LEVER INDICATOR	0850	CABLE, STARTER MOTOR BRUSH.	0606
BULB, BACK-UP LAMP.	0632	CABLE, STARTER SWITCH GROUND.	0607
BULB, DIRECTIONAL SIGNAL LIGHTS	0621	CABLE, STARTER SWITCH TO MOTOR.	0607
BULB, HEAD LAMP PARKING	0617	CABLE, STARTER SWITCH TO STARTER CUT-OUT SWITCH	0607
BULB, INSTRUMENTS LAMP.	1701	CABLE, TAIL LAMP CONNECTOR.	0619
BULB, LICENSE PLATE LAMP.	0620	CABLE, TRANS. OVERDRIVE LOCKOUT SWITCH.	0731
BULB, MAP LAMP.	1701	CABLES, BACK-UP LAMP.	0632
BULB, STOP LAMP	0619	CABLES, FOG LAMP CONNECTOR.	0631
BULB, TAIL LAMP	0619	CABLES, FRONT DIRECTIONAL SIGNAL LIGHTS	0621
BUMPER, DEFLECTOR TO BUMPER	1610	CABLE AND CONDUIT, HAND BRAKE CONTROL	1116
BUMPER, FRONT	1803	CABLE AND ENDS, HAND BRAKE.	1110
BUMPER, GAS FILLER DOOR	1604	CABLE W/FUSE, CLOCK	1718
BUMPER, HOOD.	1620	CAGE, ENGINE REAR SUPPORT INSULATOR	0101
BUMPER, REAR.	1805	CAGE, TRANS. OVERDRIVE PINION	0728
BUMPER, REAR LICENSE PLATE.	0622	CAM, AUTO. TRANS. GOVERNOR CONTROL.	0801
BUMPER, REAR SPRING	1521	CAM, DIRECTIONAL SIGNAL LIGHTS STEERING POST.	0621
BUMPER, STEER. KNUCKLE LOWER CONTROL ARM JOUNCE.	1204	CAM, LINK AND PLUNGER, AUTO. TRANS. GOVERNOR CONTROL.	0801
BUMPER, STEER. KNUCKLE UPPER CONTROL ARM REBOUND	1204	CAM, TRANS. OVERDRIVE FREE WHEELING CLUTCH.	0722
BUMPER GUARD.	1807	CAMSHAFT.	0104
BUSHING, AUTO. TRANS. GOVERNOR CONTROL SHAFT.	0801	CAMSHAFT, DISTRIBUTOR TIMER	0601
BUSHING, AUTO. TRANS. HAND CONTROL UPPER SHAFT BRACKET.	0850	CAP, CRANKSHAFT BEARING	0105
BUSHING, BENDIX DRIVE HOUSING	0606	CAP, DISTRIBUTOR.	0601
BUSHING, BRAKE PEDAL.	1108	CAP, FRONT WHEEL HUB GREASE	1409
BUSHING, CLUTCH HOUSING	0209	CAP, GASOLINE TANK FILLER	0307
BUSHING, DISTRIBUTOR TIMER BASE	0601	CAP, HORN PUSH BUTTON	1310
BUSHING, HORN PUSH BUTTON CABLE	1310	CAP, HORN PUSH BUTTON CONTACT	1310
BUSHING, MANIFOLD HEATER VALVE SHAFT.	0109	CAP, OIL PAN FILLER	0115
BUSHING, PEDAL SHAFT.	0205	CAP, RADIATOR FILLER.	0501
BUSHING, REAR SPRING.	1518	CAP, WHEEL HUB.	1409
BUSHING, REAR STABILIZER SHAFT.	1525	CAP AND DISC, WHEEL HUB	1409
BUSHING, REAR STABILIZER SHAFT LINK	1525	CARBURETER.	0302
BUSHING, SHOCK ABSORBER	1801	CARBURETER DETAILS.	0302
BUSHING, STABILIZER SHAFT	1205	CARBURETER REPAIR KIT	0302
BUSHING, STEER. GEAR HOUSING.	1302	CARRIER AND PINIONS, AUTO. TRANS. REAR PLANETARY.	0804
BUSHING, STEER. KNUCKLE	1202	CARRIER, AUTO. TRANS. FRONT PLANETARY	0804
BUSHING, STEER. KNUCKLE CONTROL ARM	1204	CARTRIDGE KIT, OIL FILTER	0118

ALPHABETICAL INDEX

C-Cont'd.	GROUP	C-Cont'd.	GROUP
CASE, INSTRUMENTS MOUNTING.	1702	COVER AND TUBE, STEERING GEAR HOUSING	1302
CASE, OIL GAGE AND RADIMETER MOUNTING	1705	COVER, AUTO. CHOKE HEATER TUBE.	0302
CASE, SPEEDOMETER	1716	COVER, AUTO. TRANS. CONVERTER VALVE BODY.	0803
CASE, TRANS.	0701	COVER, AUTO. TRANS. LOW AND FORWARD BRAKE CYLINDER	0806
CATCHER, BRAKE DRUM OIL	1402	COVER, CLOCK HOLE	1718
CHECK, THROTTLE RETURN.	0302	COVER, CAMSHAFT TIMING GEAR	0104
CIRCUIT BREAKER, AUXILIARY LIGHTING	0627	COVER, CONVERTER HOUSING.	0230
CIRCUIT BREAKER, LIGHTING SWITCH.	0615	COVER, CYLINDER HEAD REAR END	0102
CLAMP, EXHAUST MANIFOLD STOVE COVER	0109	COVER, DIRECTIONAL SIGNAL LEVER HOLE.	1305
CLAMP, EXHAUST PIPE SUPPORT	0401	COVER, DIRECTIONAL SIGNAL LIGHTS SWITCH BASE.	0621
CLAMP, GASOLINE TANK FILLER NECK.	0307	COVER, DIRECTIONAL SIGNAL LIGHTS SWITCH CABLES	0621
CLAMP, MUFFLER.	0402	COVER, ENGINE REAR SUPPORT PLATE.	0101
CLAMP, OUTLET PIPE HANGER SUPPORT	0403	COVER, ENGINE VALVE LIFTER.	0103
CLAMP, SPARE WHEEL.	1413	COVER, ENGINE VALVE ROCKER ARM.	0103
CLAMP, STEER. GEAR BALL NUT BEARING BALL GUIDE.	1304	COVER, ENGINE VALVE SPRING.	0103
CLAMP, STEER. KNUCKLE TIE ROD	1207	COVER, EXHAUST MANIFOLD STOVE	0109
CLAMP, STEER. POST GEARSHIFT SHAFT LOWER BRACKET.	0756	COVER, FRONT FENDER APRON AIR DUCT HOLE	1601
CLAMP, STEER. POST JACKET	1305	COVER, MANIFOLD HEATER VALVE.	0109
CLAMP STUD, CARBURETER AIR CLEANER.	0303	COVER, MASTER CYLINDER.	1104
CLEVIS, ACCELERATOR CROSS SHAFT TO BELL CRANK ROD	0312	COVER, OIL PUMP BODY.	0116
CLEVIS, AUTO. TRANS. HAND CONTROL TO BELL CRANK ROD	0850	COVER, PEDAL PAD.	1108
CLEVIS, CLUTCH PEDAL SHAFT TO OPERATING SHAFT ROD	0206	COVER, R/A HOUSING.	1001
CLEVIS, HAND BRAKE CONTROL CABLE.	1116	COVER, R/A UNIVERSAL JOINT FLANGE DUST.	1006
CLEVIS, STEER. POST GEARSHIFT ROD	0760	COVER, SPEEDOMETER GEAR HOUSING - WITH AUTO. TRANS.	0801
CLIP, HOOD LOCK CONTROL	1622	COVER, STEER. GEAR CONTROL VALVE TOP.	1302
CLIP, HOOD TOP PROP HOLDER.	1620	COVER, STEER. GEAR HOUSING RACK	1302
CLIP OR U BOLT, REAR SPRING	1522	COVER, STEER. GEAR HOUSING SIDE	1302
CLIP, SPARK PLUG CABLES	0603	COVER, STEER. GEAR HOUSING TOP.	1302
CLIP, SPEEDOMETER SHAFT	1716	COVER, STEER. GEAR PUMP BODY.	1309
CLIP, STEERING GEAR PUMP HOSE	1309	COVER, STEER. GEAR PUMP RESERVOIR	1309
CLIP, TRANS. FREE WHEELING CLUTCH CAM RETAINING	0722	COVER, TRANS. CASE.	0701
CLIP, TRANS. OVERDRIVE CABLE.	0731	COVER, TRANS. OVERDRIVE SOLENOID.	0731
CLIP, UNIVERSAL JOINT CROSS BEARING	0901	COVER, WATER PUMP	0505
CLOCK, ELECTRIC	1718	COVER W/BEARING, STEER. GEAR HOUSING END.	1302
CLUTCH AND FLYWHEEL HOUSING	0209	CRANKSHAFT.	0105
COCK, RADIATOR DRAIN.	0501	CROSS, UNIVERSAL JOINT.	0901
COIL, IGNITION.	0602	CROSS BAR, FRONT BUMPER	1807
COLLAR, DISTRIBUTOR SHAFT	0601	CROSS MEMBER, FRAME	1501
COLLAR, GENERATOR DRIVE END PLATE BEARING	0608	CROSS SHAFT, ACCELERATOR.	0312
COLLAR, HOOD LOCK CONTROL WIRE FASTENING.	1622	CROSS SHAFT, THROTTLE CONTROL	0312
COLLAR, TRANS. OVERDRIVE SUN GEAR SHIFTING.	0729	CROSS SHAFT AND LEVER, GEARSHIFT.	0761
COLLECTOR RING, AUTO. TRANS. FRONT PUMP	0802	CROSS AND BEARINGS UNIT, UNIVERSAL JOINT.	0901
CONDENSER, DISTRIBUTOR.	0601	CUP, DIFF. BEARING.	1004
CONDENSER, RADIO INTERFERENCE	0608	CUP, HORN PUSH BUTTON SPRING.	1310
CONE AND ROLLERS, DIFF. BEARING	1004	CUP, MASTER CYLINDER PISTON	1104
CONE AND ROLLERS, FRONT WHEEL BEARING	1407	CUP, R/A PISTON FRONT BEARING	1005
CONE AND ROLLERS, R/A PINION FRONT BEARING.	1005	CUP, R/A PINION REAR BEARING.	1005
CONE AND ROLLERS, R/A PINION REAR BEARING	1005	CUP, R/A SHAFT BEARING.	1002
CONE AND ROLLERS, R/A SHAFT BEARING	1002	CUP, STEER. GEAR POST CAM BEARING	1304
CONNECTING ROD.	0107	CUP, WHEEL BEARING.	1407
CONNECTOR, ANTI-CREEP CONTROL WIRING CABLE.	1106	CUP, WHEEL BRAKE CYLINDER	1103
CONNECTOR, CHASSIS WIRING CABLES.	0627	CUSHION, VIBRATION DAMPER FLYWHEEL.	0105
CONNECTOR, DIRECTIONAL SIGNAL LIGHTS CABLES	0621	CYLINDER, AUTO. TRANS. LOW BRAKE.	0806
CONNECTOR, FOG LAMP CABLE	0631	CYLINDER, AUTO. TRANS. REVERSE BRAKE.	0806
CONNECTOR, HORN PUSH BUTTON CABLE	1310	CYLINDER BLOCK.	0102
CONNECTOR, STARTER SWITCH TO MOTOR.	0607	CYLINDER BLOCK W/PISTONS.	0102
CONNECTOR, TAIL LAMP CABLES	0627	CYLINDER REPAIR KIT, BRAKE MASTER	1103
CONNECTOR, TRANS. OVERDRIVE CABLE	0731	CYLINDER REPAIR KIT, WHEEL BRAKE.	1101
CONTROL, HOOD LOCK.	1622	CYLINDER, STEER. GEAR POWER	1308
CONTROL COMPLETE, HAND BRAKE.	1116		
CORE, RADIATOR.	0501	D	
CORE, SPEEDOMETER SHAFT	1716	DAMPER, ENGINE VALVE SPRING	0103
COUNTERSHAFT, TRANS.	0703	DEFLECTOR, FENDER GRAVEL.	1604
COUPLING, DISTRIBUTOR DRIVE SHAFT	0601	DEFLECTOR, RADIATOR LOWER AIR	0502
COUPLING, DISTRIBUTOR SHAFT	0601	DEFLECTOR, RADIATOR UPPER AIR	0502
COUPLING, GASOLINE TANK TO FUEL PUMP PIPE	0308	DEFLECTOR, REAR BUMPER GRAVEL	1610
COUPLING, OIL PRESSURE GAGE PIPE.	0116	DEFLECTOR W/FILLER, REAR BUMPER GRAVEL.	1610
COVER AND BUSHING, STEER. GEAR HOUSING.	1302	DETENT, AUTO. TRANS. GOVERNOR CONTROL CAM	0801
		DETENT, AUTO. TRANS. GOVERNOR VALVE	0801
		DIAL AND HOUSING, AUTO. TRANS. HAND CONTROL SELECTOR INDICATOR.	0850

ALPHABETICAL INDEX

D-Cont'd.

	<u>GROUP</u>
DIAL FACE, INSTRUMENTS.	1701
DIAPHRAGM REPAIR KIT, FUEL PUMP	0301
DISC, AUTO. TRANS. MULTIPLE DISC CLUTCH FRICTION.	0804
DISTRIBUTOR, IGNITION	0601
DISTRIBUTOR PARTS	0601
DOOR, GAS FILLER.	1604
DOVETAIL, HOOD LOCK	1622
DRUM, AUTO. TRANS. FORWARD BRAKE.	0804
DRUM, AUTO. TRANS. FRONT SUN GEAR AND LOW BRAKE	0804
DRUM, AUTO. TRANS. REVERSE BRAKE.	0804
DRUM, BRAKE	1402
DUST SHIELD, PROPELLER SHAFT SUPPORT BEARING.	0902

E

ELBOW, CARBURETER AIR CLEANER	0303
ELBOW, OIL FILTER PIPE.	0118
ELBOW, OIL PRESSURE GAGE PIPE	0116
ELBOW, STEER. GEAR CONTROL VALVE TO CYLINDER PIPES UNIVERSAL FITTING.	1308
ELBOW, STEER. GEAR POWER CYLINDER BLEEDER PIPE	1308
EMBLEM, HOOD FRONT.	1620
EMBLEM, HOOD TOP ORNAMENT	1620
EMBLEM, HORN PUSH BUTTON.	1310
EMBLEM, INSTRUMENTS MAT	1701
EMBLEM, REAR FENDER	1604
EMBLEM, SPOTLIGHT	0633
END, STEER. KNUCKLE TIE ROD	1207
ENGINE STRIPPED	0100
EQUALIZER, HAND BRAKE CABLE	1110
EXHAUST PIPE.	0401
EXTENSION, AUTO. CHOKE TO MANIFOLD PIPE	0305
EXTENSION, CLUTCH PEDAL PULLBACK SPRING	0204
EXTENSION, FAN SHROUD	0506
EXTENSION, FUEL PUMP TO CARBURETER PIPE	0305
EXTENSION, OUTLET PIPE.	0403
EXTENSION, RADIATOR GRILLE BAR.	0502
EXTENSION CASE ASSEMBLY, AUTO. TRANS.	0800

F

FACING, CLUTCH DRIVEN PLATE	0201
FAN, ENGINE	0506
FENDER AND APRON, FRONT	1601
FENDER, REAR.	1604
FERRULE, AUTO. TRANS. HAND CONTROL SELECTOR LEVER KNOB	0850
FERRULE, HORN PUSH BUTTON CABLE INSULATING.	1310
FIN, RADIATOR GRILLE LOWER BAR.	0502
FITTING, MASTER CYLINDER OUTLET	1104
FITTING, SPARK MODIFIER SUCTION	0601
FITTING, WHEEL BRAKE CYLINDER BLEEDER	1103
FLANGE, AUTO. TRANS. UNIVERSAL JOINT.	0847
FLANGE, STEER. GEAR WORM SHAFT TO POST.	1304
FLANGE, TRANS. CASE	0701
FLANGE, TRANS. UNIVERSAL JOINT.	0745
FLANGE, TRANS. UNIVERSAL JOINT.	0847
FLANGE W/COVER, R/A UNIVERSAL JOINT	1006
FLASHER, DIRECTIONAL SIGNAL LIGHTS.	0621
FLOAT AND LEVER, CARBURETER	0302
FLYWHEEL.	0106
FLYWHEEL, VIBRATION DAMPER.	0105
FOG LAMP KIT.	0631
FORK, TRANS. GEARSHIFT SECOND AND HIGH.	0747
FORK, TRANS. OVERDRIVE SHIFT.	0725
FRAME	1500
FREE WHEEL UNIT, AUTO. TRANS. FORWARD	0804
FREE WHEEL UNIT, AUTO. TRANS. REVERSE	0804
FUEL PUMP	0301

F-Cont'd.

FUEL PUMP REPAIR KIT.	0301
FUSE, ANTO-CREEP CONTROL WIRING CABLE	1106
FUSE, CLOCK	1718
FUSE, DIRECTIONAL SIGNAL LIGHTS FLASHER CABLE	0621
FUSE, FOG LAMP SWITCH	0631
FUSE, TRANS. OVERDRIVE SOLENOID CONTROL RELAY	0731

G

GAGE, AUTO. TRANS. OIL LEVEL.	0808
GAGE, GASOLINE (DASH UNIT).	1713
GAGE, GASOLINE (TANK UNIT).	0307
GAGE, OIL LEVEL	0115
GAGE, OIL PRESSURE.	1707
GAGE, WATER TEMPERATURE (ENGINE UNIT)	0102
GASKET, AIR CLEANER COVER	0303
GASKET, AIR CLEANER ELEMENT	0303
GASKET, AIR CLEANER TO CARBURETER	0303
GASKET, AUTO. TRANS. CONVERTER VALVE BODY	0803
GASKET, AUTO. TRANS. CONVERTER VALVE BODY COVER	0803
GASKET, AUTO. TRANS. EXTENSION CASE	0801
GASKET, AUTO. TRANS. LOW AND FORWARD BRAKE CYLINDER PLATE OR COVER	0806
GASKET, AUTO. TRANS. LOW BRAKE CYLINDER	0806
GASKET, AUTO. TRANS. OIL COLLECTOR RING	0802
GASKET, AUTO. TRANS. OIL PAN.	0808
GASKET, AUTO. TRANS. OIL PAN SCREEN SHROUD.	0808
GASKET, AUTO. TRANS. PUMP RELIEF VALVE BODY	0803
GASKET, AUTO. TRANS. REAR OIL PUMP.	0801
GASKET, AUTO. TRANS. REAR OIL PUMP COVER.	0801
GASKET, AUTO. TRANS. REVERSE BRAKE CYLINDER	0806
GASKET, AUTO. TRANS. REVERSE BRAKE CYLINDER PLATE	0806
GASKET, AUTO. TRANS. SHUTTLE VALVE.	0806
GASKET, AUTO. TRANS. VALVE BLOCK BASE PLATE	0803
GASKET, BACK-UP LAMP LENS	0632
GASKET, BACK-UP LAMP MOUNTING	0632
GASKET, CAMSHAFT TIMING GEAR COVER.	0104
GASKET, CARBURETER AIR CLEANER ELBOW.	0303
GASKET, CYLINDER HEAD	0102
GASKET, CYLINDER HEAD REAR END COVER.	0102
GASKET, DISTRIBUTOR SUPPORT	0601
GASKET, ENGINE BREATHER TUBE.	0102
GASKET, ENGINE FRONT PLATE.	0101
GASKET, ENGINE GOVERNOR	0305
GASKET, ENGINE VALVE LIFTER COVER	0103
GASKET, ENGINE VALVE SPRING COVER	0103
GASKET, ENGINE VALVE ROCKER ARM COVER	0103
GASKET, ENGINE WATER OUTLET	0102
GASKET, EXHAUST PIPE FLANGE	0109
GASKET, EXHAUST PIPE FLANGE	0401
GASKET, FRONT FENDER APRON AIR DUCT HOLE COVER	1601
GASKET, FUEL PUMP	0301
GASKET, FUEL PUMP BOWL.	0301
GASKET, FUEL PUMP SUPPORT	0301
GASKET, FUEL PUMP VALVE	0301
GASKET, GASOLINE TANK GAGE.	0307
GASKET, HEAD LAMP PARKING LAMP LENS	0617
GASKET, HORN PUSH BUTTON EMBLEM	1310
GASKET, IGNITION DISTRIBUTOR.	0601
GASKET, INSTRUMENTS PANEL BEZEL	1701
GASKET, KING PIN.	1203
GASKET, LICENSE PLATE LAMP LENS	0620
GASKET, MANIFOLD.	0109
GASKET, MANIFOLD HEATER VALVE COVER	0109
GASKET, MANIFOLD HEATER VALVE HOUSING	0109
GASKET, MASTER CYLINDER COVER	1104
GASKET, OIL FILTER CARTRIDGE.	0118
GASKET, OIL FILTER COVER.	0118

ALPHABETICAL INDEX

G-Cont'd.	GROUP	G-Cont'd.	GROUP
GASKET, OIL PRESSURE RELIEF VALVE PLUG.	0117	GLASS, SPEEDOMETER.	1716
GASKET, OIL PUMP BODY	0116	GOVERNOR, AUTO. TRANS.	0801
GASKET, OIL PUMP BODY COVER	0116	GOVERNOR, ENGINE.	0305
GASKET, OIL PUMP SUCTION PIPE	0116	GOVERNOR, TRANS. OVERDRIVE CONTROL.	0731
GASKET, WATER PUMP BODY	0505	GOVERNOR KIT, ENGINE.	0305
GASKET, R/A HOUSING COVER	1001	GREASE FITTING, CLUTCH RELEASE SHAFT RETAINER.	0203
GASKET, R/A PINION BEARING OIL SEAL	1005	GREASE SEAL, CLUTCH RELEASE SHAFT RETAINER.	0203
GASKET, R/A SHAFT OUTER RETAINER AND REINFORCEMENT	1002	GRILLE BAR, FRONT BUMPER.	1807
GASKET, SPARK MODIFIER TO BASE.	0601	GRILLE, RADIATOR.	0502
GASKET, SPARK PLUG.	0603	GROMMET, AUTO. CHOKE HEATER TUBE HOSE NIPPLE.	0302
GASKET, SPEEDOMETER GEAR HOUSING - WITH AUTO. TRANS.	0801	GROMMET, AUTO. TRANS. HAND CONTROL SELECTOR LEVER.	0850
GASKET, SPEEDOMETER GEAR HOUSING COVER - WITH AUTO. TRANS.	0801	GROMMET, BACK-UP LAMP CABLES.	0632
GASKET, SPEEDOMETER GLASS	1716	GROMMET, BREAK PEDAL	1108
GASKET, SPEEDOMETER SHAFT	1716	GROMMET, CARBURETER AIR CLEANER SUPPORT	0303
GASKET, STEER. GEAR HOUSING SIDE COVER.	1302	GROMMET, CHASSIS CABLES DASH.	0627
GASKET, STEER. GEAR HOUSING TOP COVER	1302	GROMMET, CLUTCH PEDAL	0204
GASKET, STEER. GEAR POWER CYLINDER.	1308	GROMMET, FOG LAMP CABLE	0631
GASKET, STEER. GEAR PUMP RESERVOIR TO BODY.	1309	GROMMET, GASOLINE TANK FILLER NECK.	0307
GASKET, STEER. GEAR PUMP RESERVOIR TO BODY COVER	1309	GROMMET, HEAD LAMP CABLES	0627
GASKET, STEER. GEAR PUMP RESERVOIR COVER.	1309	GROMMET, HOOD LOCK CONTROL DASH	1622
GASKET, STEER. GEAR RESERVOIR COVER BOLT GUIDE	1309	GROMMET, HORN TO RELAY CABLE.	0625
GASKET, TAIL LAMP LENS.	0619	GROMMET, PARKING LAMP CABLE	0617
GASKET, TRANS. CASE COVER	0701	GROMMET, SHOCK ABSORBER	1801
GASKET, TRANS. CASE FLANGE.	0701	GROMMET, TAIL LAMP CABLES TO FENDER	0619
GASKET, TRANS. OVERDRIVE CONTROL LOCKOUT SWITCH.	0731	GROMMET, TRANS. OVERDRIVE SOLENOID SHIELD	0731
GASKET, TRANS. OVERDRIVE HOUSING.	0720	GUARD, FRONT BUMPER LICENSE PLATE	1807
GASKET, TRANS. OVERDRIVE HOUSING ADAPTER PLATE	0720	GUARD, GAS FILLER DOOR.	1604
GASKET, WATER PUMP MANIFOLD	0505	GUIDE, BRAKE SHOE SELF ADJUSTING LEVER WEDGE.	1101
GASKET, WATER TEMPERATURE GAGE ADAPTER.	0102	GUIDE, ENGINE VALVE	0103
GASKETS, CARBURETER	0302	GUIDE, HAND BRAKE CABLE	1110
GASKET SET, AUTO. TRANS.	0808	GUIDE, HAND CONTROL HANDLE AND PLUMGER.	1116
GASKET SET, AUTO. TRANS. VALVE BLOCK.	0803	GUIDE, HOOD LOCK LATCH LEVER.	1622
GASKET SET, CARBURETER.	0302	GUIDE, STEER. GEAR BALL NUT BEARING BALL.	1304
GASKET SET, MANIFOLD.	0109	GUIDE, STEER. GEAR POWER CYLINDER RACK.	1308
GASKET SET, OIL PAN	0115	GUIDE, STEER. GEAR RESERVOIR COVER BOLT	1309
GASKET SET, TRANS.	0701	GUN, GREASE	1812
GASKET SET, VALVE GRINDING.	0102		
GEAR AND PINION, R/A (MATCHED).	1005	H	
GEAR AND PINION KIT, DIFF. SIDE BEVEL	1004	HAND BRAKE COMPLETE	1116
GEAR, AUTO. TRANS. MAINSHAFT GOVERNOR DRIVE	0804	HANDLE AND PLUNGER, HAND BRAKE CONTROL CABLE PULL.	1116
GEAR, AUTO. TRANS. MAINSHAFT PARKING BRAKE.	0804	HANGER, GASOLINE TANK	0307
GEAR, AUTO. TRANS. REAR PUMP AND GOVERNOR DRIVE	0801	HANGER, REAR SPRING	1505
GEAR, CAMSHAFT TIMING	0104	HARNES, CHASSIS WIRING	0627
GEAR CLUSTER, TRANS. COUNTERSHAFT	0703	HARNES, DIRECTIONAL SIGNAL LIGHTS TELL-TALE CABLES	0621
GEAR, CRANKSHAFT TIMING	0105	HARNES, TAIL AND STOP LAMP CABLES.	0627
GEAR, DIFF. SIDE BEVEL.	1004	HARNES, TRANS. OVERDRIVE CONTROL WIRING.	0731
GEAR, DISTRIBUTOR AND OIL PUMP DRIVE SHAFT.	0601	HEAD, CYLINDER.	0102
GEAR, FLYWHEEL STARTER.	0106	HEAD LAMP	0617
GEAR, OIL PUMP AND DISTRIBUTOR DRIVE SHAFT.	0116	HEATER TUBE KIT, AUTOMATIC CHOKE.	0302
GEAR, OIL PUMP DRIVE.	0116	HINGE, GAS FILLER DOOR.	1604
GEAR, OIL PUMP IDLER.	0116	HINGE W/LINKS, HOOD TOP	1620
GEAR, SPEEDOMETER DRIVE	1716	HOLDER, STARTER MOTOR BRUSH	0606
GEAR, TRANS. LOW AND REVERSE, SLIDING	0702	HOOD.	1620
GEAR, TRANS. OVERDRIVE SHAFT RING	0721	HOOD LOCK	1622
GEAR, TRANS. OVERDRIVE CONTROL GOVERNOR	0731	HOOK, HOOD LOCK SAFETY.	1622
GEAR, TRANS. OVERDRIVE STATIONARY OR SUN.	0729	HORN.	0625
GEAR, TRANS. REVERSE IDLER.	0704	HORN RING, HORN PUSH BUTTON	1310
GEAR, TRANS. SECOND AND HIGH SYNCHRONIZER	0702	HOSE, AUTO. CHOKE HEATER TUBE	0302
GEAR, TRANS. SECOND SPEED	0702	HOSE, BRAKE PIPE FLEXIBLE	1107
GENERATOR ASSEMBLY.	0608	HOSE, GASOLINE TANK FILLER NECK	0307
GLASS, CLOCK.	1718	HOSE, RADIATOR.	0507
GLASS, GASOLINE GAGE AND AMMETER.	1712	HOSE, STEER. GEAR PUMP TO CONTROL VALVE	1309
GLASS, INSTRUMENTS.	1701	HOUSING, BENDIX DRIVE	0606
GLASS, INSTRUMENTS.	1702	HOUSING, CLUTCH	0209
GLASS, OIL GAGE AND RADIMETER	1705	HOUSING, FOG LAMP	0631
		HOUSING, R/A	1001
		HOUSING, SPEEDOMETER GEAR - WITH AUTO. TRANS.	0801
		HOUSING, STEER. GEAR.	1302

ALPHABETICAL INDEX

H-Cont'd.	GROUP	L-Cont'd.	GROUP
HOUSING, TORQUE CONVERTER	0230	LEVER, AUTO. TRANS. PARKING BRAKE TOGGLE	
HOUSING, TRANS. OVERDRIVE	0720	ARM SHAFT.	0801
HUB AND CUPS, FRONT WHEEL	1402	LEVER, BRAKE SHOE SELF ADJUSTING.	1101
HUB AND DRUM, WHEEL	1402	LEVER, CLUTCH PEDAL SHAFT	0205
HUB, CRANKSHAFT FAN DRIVE PULLEY.	0105	LEVER, CLUTCH TOGGLE.	0202
HUB, FAN.	0506	LEVER, GEARSHIFT CROSS SHAFT.	0761
HUB ONLY, REAR WHEEL.	1402	LEVER, HAND BRAKE CABLE OPERATING	1110
HUB, STEER. GEAR PUMP DRIVE PULLEY.	1309	LEVER, HOOD LOCK LATCH.	1622
HYDRAULIC BRAKE FLUID	1104	LEVER, SIGNAL LIGHTS SWITCH OPERATING	0621
HYPOID LUBRICANT, R/A	1000	LEVER, STEER. POST GEARSHIFT.	0756
I		LEVER, TRANS. OVERDRIVE SHIFT SHAFT	0725
IMPELLER, WATER PUMP.	0505	LEVER AND GUIDE, NOROL VALVE.	1105
INSERT, FRONT FENDER ORNAMENT	1601	LEVER AND PIN, BRAKE SHOE LINK OPERATING.	1101
INSERT, HOOD TOP ORNAMENT	1620	LEVER AND SHAFT, TRANS. GEARSHIFT	0747
INSERT, SPRING LEAF LINER OR.	1518	LEVER AND SLEEVE, STEER. POST GEARSHIFT	
INSULATOR, AMMETER POST	1709	CROSS SHIFT	0759
INSULATOR, CIRCUIT BREAKER.	0627	LEVER KIT, SIGNAL LIGHTS SWITCH	0103
INSULATOR, ENGINE FRONT SUPPORT	0101	LIFTER, ENGINE VALVE.	0103
INSULATOR, ENGINE REAR SUPPORT.	0101	LINING, BRAKE SHOE.	1101
INSULATOR, FRONT SPRING	1510	LINING SET, BRAKE SHOE.	1101
INSULATOR, GASOLINE GAGE POST	1713	LINK, ACTUATING SPRING ADJUSTING.	0312
INSULATOR, HORN PUSH BUTTON CABLE CONTACT		LINK, BRAKE SHOE OPERATING.	1101
RING	1310	LINK, HOOD TOP HINGE.	1620
INSULATOR, RADIMETER AND GASOLINE GAGE.	1714	LINK, MASTER CYLINDER CONNECTING.	1104
INSULATOR, STEER. POST.	1304	LINK, REAR STABILIZER SHAFT	1525
J		LOCK, HOOD.	1622
JACK.	1812	LOCK, IGNITION.	0602
JACKET, STEER. POST	1305	LOCK PLATE, IGNITION DISTRIBUTOR.	0601
JETS, CARBURETER.	0302	LOCK PLATE, TRANS. REVERSE IDLER SHAFT AND	
JUNCTION BLOCK, HEAD LAMP CABLES.	0627	COUNTERSHAFT.	0704
JUNCTION BLOCK, LICENSE LAMP CABLE.	0620	M	
K		MAIN SHAFT, AUTO. TRANS.	0804
KEY, IGNITION LOCK.	0602	MANIFOLD, EXHAUST	0109
KING PIN.	1203	MANIFOLD, INLET	0109
KING PIN KIT.	1203	MANIFOLD W/PLUGS, WATER PUMP.	0505
KIT, DIFF. SIDE BEVEL GEAR AND PINION	1004	MASK, INSTRUMENTS	1701
KIT, FRONT FENDER ORNAMENT.	1601	MASK, INSTRUMENTS	1702
KIT, GENERATOR BRUSH HOLDER	0608	MASTER CYLINDER, BRAKE.	1103
KIT, KING PIN	1203	MASTER CYLINDER REPAIR KIT.	1104
KIT, WATER PUMP REPAIR.	0505	MAT, INSTRUMENTS.	1701
KIT, RADIATOR AND WATER CLEANER	0501	MEMBER, FRAME CROSS	1501
KNOB, AUTO. TRANS. HAND CONTROL SELECTOR		METERING ROD, CARBURETER.	0302
LEVER	0850	MIRROR, SPOTLIGHT REAR VIEW	0633
KNOB, CLOCK SET	1718	MOULDING, RADIATOR GRILLE PANEL	0502
KNOB, FOG LAMP SWITCH	0631	MOULDING, REAR FENDER	1604
KNOB, INSTRUMENT LAMP SWITCH.	0615	MUFFLER	0402
KNOB, LIGHTING SWITCH	0615	MULTIPLE DISC CLUTCH, AUTO. TRANS.	0804
KNOB, STARTER SWITCH.	0607	N	
KNOB, STEER. POST GEARSHIFT LEVER	0756	NAME PLATE, FRONT FENDER.	1601
KNUCKLE, STEER.	1202	NAME PLATE, HOOD FRONT.	1620
L		NAME PLATE, RADIATOR GRILLE BAR	0502
LAMP, BACK-UP	0632	NECK, GASOLINE TANK FILLER.	0307
LAMP, FOG	0631	NEEDLE AND SEAT, CARBURETER FLOAT	0302
LAMP, HEAD.	0617	NIPPLE, AUTO. CHOKE HEATER TUBE HOSE.	0302
LAMP, TAIL AND STOP	0619	NIPPLE, HIGH TENSION CABLE.	0603
LATCH, HAND BRAKE CONTROL PLUNGER	1116	NOROL REPAIR KIT.	1105
LEAF, REAR SPRING MAIN.	1518	NOROL UNIT.	1105
LENS, BACK-UP LAMP.	0632	NUT, BRAKE PIPE	1107
LENS, HEAD LAMP PARKING LAMP.	0617	NUT, FRONT WHEEL BEARING LOCK	1407
LENS, LICENSE PLATE LAMP.	0620	NUT, GASOLINE TANK TO FUEL PUMP PIPE.	0308
LENS, TAIL LAMP	0619	NUT, PROPELLER SHAFT SLEEVE CAP/OR.	0900
LEVER, ACCELERATOR CONTROL.	0312	O	
LEVER, AUTO. TRANS. CONTROL SHAFT INNER	0808	OILER, GENERATOR END PLATE.	0608
LEVER, AUTO. TRANS. GOVERNOR CONTROL SHAFT.	0801	OILER, STARTER MOTOR COMMUTATOR END PLATE	0606
LEVER, AUTO. TRANS. HAND CONTROL SELECTOR	0850	OIL FILTER.	0118
		OIL FILTER KIT.	0118
		OIL PAN, AUTO. TRANS.	0808

ALPHABETICAL INDEX

O-Cont'd.

GROUP

OIL PAN, ENGINE	0115
OIL PUMP, ENGINE	0116
OIL PUMP, AUTO. TRANS. REAR	0801
OIL PUMP KIT, ENGINE	0116
OIL SEAL, AUTO. TRANS. EXTENSION CASE REAR	0801
OIL SEAL, AUTO. TRANS. FRONT PUMP	0802
OIL SEAL, AUTO. TRANS. FRONT RING GEAR	0804
OIL SEAL, CRANKSHAFT REAR BEARING	0105
OIL SEAL, CRANKSHAFT REAR BEARING CAP	0105
OIL SEAL, ENGINE VALVE STEM	0103
OIL SEAL, FUEL PUMP	0301
OIL SEAL, OVERDRIVE SHIFT SHAFT	0725
OIL SEAL, R/A SHAFT INNER	1002
OIL SEAL, STEER. GEAR CAM LEVER SHAFT	1306
OIL SEAL, STEER. GEAR CONTROL VALVE TOP COVER	1302
OIL SEAL, STEER. GEAR POWER CYLINDER ROD	1308
OIL SEAL, STEER. GEAR PUMP DRIVE SHAFT	1309
OIL SEAL, STEER. GEAR SHAFT AND WORM	1304
OIL SEAL, TRANS. GEARSHIFT LEVER AND SHAFT	0747
OIL SEAL, TRANS. OVERDRIVE HOUSING	0720
OIL SEAL, TRANS. OVERDRIVE SOLENOID PAWL OPERATING ROD	0731
OIL WICK, STARTER MOTOR COMMUTATOR END PLATE OILER	0606
ORNAMENT, FRONT FENDER	1601
ORNAMENT, HOOD TOP	1620
ORNAMENT, RADIATOR GRILLE PANEL	0502
ORNAMENT RING, REAR FENDER	1604
OUTLET, ENGINE WATER	0102

P

PACK, ENGINE BREATHER TUBE FILTER	0102
PAD, BRAKE PEDAL	1108
PAD, CLUTCH PEDAL	0204
PAD, GASOLINE TANK	0307
PAD, HORN PUSH BUTTON SHOCK	1310
PAN, OIL, ENGINE	0115
PANEL AND AIR INTAKE, FRONT FENDER LOWER	1601
PANEL, RADIATOR GRILLE	0502
PARKING BRAKE, AUTO. TRANS.	0801
PAWL AND TOGGLE, AUTO. TRANS. PARKING BRAKE	0801
PAWL, AUTO. TRANS. DIRECT DRIVE	0801
PAWL, HAND BRAKE CONTROL PLUNGER	1116
PAWL, SIGNAL LIGHTS SWITCH PLATE	0621
PAWL, TRANS. OVERDRIVE SUN GEAR	0729
PEDAL, ACCELERATOR	0312
PEDAL, BRAKE	1108
PEDAL, CLUTCH	0204
PILOT, VIBRATION DAMPER	0105
PINION, BENDIX DRIVE	0606
PINION, SPEEDOMETER DRIVE	1716
PINION, TRANS. MAIN DRIVE	0705
PINION, DIFFERENTIAL	1004
PIN, STEERING KNUCKLE CONTROL ARM PIVOT	1204
PIN, TRANS. OVERDRIVE SHIFT FORK GUIDE	0725
PIPE AND NUTS, STEER. GEAR CONTROL VALVE TO POWER CYLINDER	1308
PIPE AND NUTS, STEER. GEAR POWER CYLINDER BLEEDER	1308
PIPE, AUTOMATIC CHOKE TO MANIFOLD	0302
PIPE, ENGINE GOVERNOR TO CARBURETER	0305
PIPE, EXHAUST	0401
PIPE, FUEL PUMP TO CARBURETER	0308
PIPE, GASOLINE TANK TO FUEL PUMP	0308
PIPE, MUFFLER OUTLET	0403
PIPE, OIL FILTER INLET	0118
PIPE, OIL FILTER OUTLET	0118
PIPE, OIL PRESSURE GAGE	0116
PIPE, OIL PUMP SUCTION	0116
PIPE, SPARK MODIFIER TO CARBURETER	0601
PIPES, BRAKE	1107

P-Cont'd.

GROUP

PIPE WITH NUTS, MASTER CYLINDER TO FRAME BRACKET	1104
PIPE WITH NUTS, NOROL TO FRONT BRAKE PIPE	1105
PISTON AND SEAL KIT, AUTO. TRANS. MULTIPLE DISC CLUTCH	0804
PISTON, AUTO. TRANS. BRAKE	0806
PISTON, AUTO. TRANS. PARKING BRAKE INTERLOCK	0801
PISTON, ENGINE	0108
PISTON, FRONT WHEEL BRAKE CYLINDER	1103
PISTON, WHEEL BRAKE CYLINDER	1103
PISTONS, CARBURETER	0302
PISTON, STEER. GEAR POWER CYLINDER	1308
PISTON PIN	0108
PISTON RING SET	0108
PISTON WITH CUP, MASTER CYLINDER	1104
PLATE, AMMETER AND OIL GAGE MOUNTING	1709
PLATE AND BLOCKING RING, TRANS. OVERDRIVE SUN GEAR	0729
PLATE, AUTO. TRANS. GOVERNOR VALVE STOP	0801
PLATE, AUTO. TRANS. HAND CONTROL SELECTOR LEVER DETENT	0850
PLATE, AUTO. TRANS. LOW AND FORWARD BRAKE CYLINDER	0806
PLATE, AUTO. TRANS. LOW BRAKE DRUM	0804
PLATE, AUTO. TRANS. MULTIPLE DISC CLUTCH DISC	0804
PLATE, AUTO. TRANS. MULTIPLE DISC CLUTCH RETRACTOR SPRING	0804
PLATE, AUTO. TRANS. REVERSE BRAKE CYLINDER	0806
PLATE, AUTO. TRANS. VALVE BLOCK BASE	0803
PLATE, BENDIX DRIVE SPRING	0606
PLATE, BRAKE BACKING	1102
PLATE, BACKING PLATE REINFORCING	1102
PLATE, CLUTCH COLLAR WEAR	0203
PLATE, CLUTCH DRIVEN	0201
PLATE, CLUTCH HOUSING COVER FRONT	0209
PLATE, CLUTCH PRESSURE	0202
PLATE, CONVERTER HOUSING COVER FRONT	0230
PLATE, CRANKSHAFT TO CONVERTER DRIVE	0105
PLATE, DISTRIBUTOR TIMER BASE	0601
PLATE, DISTRIBUTOR TIMER WEIGHT HOLD DOWN	0601
PLATE, ENGINE FRONT	0101
PLATE, ENGINE REAR SUPPORT	0101
PLATE, GENERATOR COMMUTATOR END	0608
PLATE, GENERATOR DRIVE END	0608
PLATE, GRILLE GUARD	1807
PLATE, HOOD LOCK LOWER	1622
PLATE, HORN BRACKET LAMINATION	0625
PLATE, HORN BRACKET MOUNTING	0625
PLATE, HORN PUSH BUTTON CONTACT	1310
PLATE, INSTRUMENTS MOUNTING	1701
PLATE, RADIMETER AND GASOLINE GAGE MOUNTING	1714
PLATE, REAR SPRING CLIP	1522
PLATE, SIGNAL LIGHTS SWITCH	0621
PLATE, STARTER MOTOR COMMUTATOR END	0606
PLATE, STEER. GEAR POWER CYLINDER RACK STOP	1308
PLATE, STEER. GEAR PUMP PRESSURE	1309
PLATE, STEER. POST	1304
PLATE, STEER. POST JACKET LOWER	1305
PLATE, TRANS. OVERDRIVE HOUSING ADAPTER	0720
PLATE, TRANS. OVERDRIVE SUN GEAR COVER	0729
PLATE, TRANS. SYNCHRONIZER SHIFTER PLATE	0702
PLATE, VIBRATION DAMPER LOCK	0105
PLATE W/SELECTOR VALVE, AUTO. TRANS. VALVE BLOCK MANIFOLD	0803
PLUG, AUTO. TRANS. PRESSURE TAKE-OFF	0808
PLUG, CAMSHAFT REAR BEARING HOLE	0102
PLUG, CYLINDER BLOCK	0102
PLUG, CYLINDER HEAD	0102
PLUG, CYLINDER WATER JACKET	0102
PLUG, CYLINDER WATER JACKET DRAIN	0102
PLUG, ENGINE VALVE ROCKER ARM SHAFT	0103
PLUG, OIL PAN DRAIN	0115

ALPHABETICAL INDEX

P-Cont'd.	GROUP	R-Cont'd.	GROUP
PLUG, OIL PRESSURE RELIEF VALVE	0117	RETAINER, STEER. GEAR CAM LEVER SHAFT OIL WASHER.	1306
PLUG, R/A SHAFT BEARING GREASE.	1001	RETAINER, TAIL LAMP REFLECTOR BUTTON.	0619
PLUG, STEER. GEAR HOUSING GREASE.	1302	RETAINER, TRANS. FREE WHEELING CLUTCH ROLLER.	0722
PLUGS, CARBURETER	0302	RETAINER, TRANS. OVERDRIVE SOLENOID CONTROL RELAY FUSE.	0731
PLUGS, MANIFOLD	0109	RETAINER, UNIVERSAL JOINT CROSS BEARING WASHER.	0901
PLUNGER, STEER. GEAR CONTROL VALVE CENTERING SPRING	1302	RETAINER, UPPER CONTROL ARM INNER SHAFT BUSHING	1204
PLUNGER, TRANS. GEAR SHIFT INTERLOCK.	0747	RIM, BATTERY BOX HOLD DOWN.	0610
POINT SET, DISTRIBUTOR CONTACT.	0601	RIM, HEAD LAMP.	0617
POST AND CAM, STEERING GEAR	1304	RIM, RADIATOR GRILLE PANEL ORNAMENT	0502
POST AND FLANGE, STEERING	1304	RIM, TAIL LAMP.	0619
PROP. HOOD TOP.	1620	RING, FOG LAMP SEALED BEAM UNIT RETAINING	0631
PROTECTOR, GASOLINE TANK FILLER NECK.	0307	RING GEAR, AUTO. TRANS. MAIN SHAFT FRONT.	0804
PULLEY, CRANKSHAFT FAN DRIVE.	0105	RING GEAR, AUTO. TRANS. REAR.	0804
PULLEY, CRANKSHAFT POWER STEERING DRIVE	0105	RING, HEAD LAMP SEALED BEAM UNIT RETAINING.	0617
PULLEY, FAN	0506	RING, HORN PUSH BUTTON CABLE CONTACT.	1310
PULLEY, GENERATOR DRIVING	0608	RING, PISTON.	0108
PULLEY, STEER. GEAR PUMP DRIVE.	1309	RING, RADIATOR GRILLE PANEL ORNAMENT.	0502
PUMP AND COLLECTOR RING ASSEMBLY, AUTO. TRANS. FRONT	0802	RING, RADIATOR GRILLE PANEL ORNAMENT RIM.	0502
PUMP AND FAN HUB, WATER	0505	RING, STEER. GEAR POWER CYLINDER PISTON	1308
PUMP, OIL, ENGINE	0116	RING, STEER. GEAR PUMP.	1309
PUMP, STEER. GEAR HYDRAULIC	1309	RING, WHEEL TRIM.	1402
PUMP, TIRE.	1812	ROD, ACCELERATOR CROSS SHAFT TO BELL CRANK.	0312
PUSH ROD, ACCELERATOR	0312	ROD, ACCELERATOR CROSS SHAFT TO TRANSMISSION.	0312
PUSH ROD, ENGINE VALVE ROCKER ARM	0103	ROD, ACCELERATOR LEVER TO CROSS SHAFT	0312
PUSH ROD, FUEL PUMP	0301	ROD, AUTO. TRANS. HAND CONTROL CUT-OUT SWITCH OPERATING	0854
R		ROD, AUTO. TRANS. HAND CONTROL TO BELL CRANK.	0850
RACK, STEER. GEAR POWER CYLINDER.	1308	ROD, AUTO. TRANS. TO BELL CRANK CONTROL	0850
RADIATOR CORE	0501	ROD, AUTO. TRANS. PARKING BRAKE ACTUATING	0801
RADIATOR GRILLE	0502	ROD, BACK-UP LAMP SWITCH OPERATING.	0632
RADIMETER	1714	ROD, CLUTCH PEDAL SHAFT TO OPERATING SHAFT.	0206
RAIL, TRANS. OVERDRIVE SHIFT.	0725	ROD, HOOD TIE	1620
REFLECTOR, TAIL LAMP.	0619	ROD, NOROL VALVE OPERATING.	1105
REINFORCEMENT, CRANKSHAFT TO CONVERTER DRIVE PLATE.	0105	ROD, PEDAL TO MASTER CYLINDER	1109
REINFORCEMENT, ENGINE FRONT SUPPORT BRACKET	0101	ROD, STEER. GEAR POWER CYLINDER PISTON TO RACK	1308
REINFORCEMENT, HOOD TOP	1620	ROD, STEER. POST GEARSHIFT.	0760
REINFORCEMENT, TIMING GEAR COVER.	0104	ROD, THROTTLE CONTROL BELL CRANK TO CARBURETER	0312
RELAY, HORN	0625	ROD, THROTTLE CONTROL CROSS SHAFT TO CARBURETER	0312
RELAY, TRANS. OVERDRIVE SOLENOID CONTROL.	0731	ROD AND BUTTON, HAND BRAKE CONTROL RELEASE.	1116
REPAIR KIT, CARBURETER.	0302	ROD AND ENDS, STEER. REACH.	1312
REPAIR KIT, FUEL PUMP DIAPHRAGM	0301	ROD W/ENDS, STEER. KNUCKLE TIE.	1207
RESERVOIR, STEER. GEAR PUMP	1309	ROLLER, TRANS. COUNTERSHAFT GEAR CLUSTER BEARING	0703
RETAINER, AUTO. TRANS. FRONT PUMP RELIEF VALVE PISTON SPRING	0803	ROLLER, TRANS. FREE WHEELING CLUTCH CAM	0722
RETAINER, AUTO. TRANS. MULTIPLE DISC CLUTCH RETRACTOR SPRING.	0804	ROLLER, TRANS. MAIN SHAFT FRONT BEARING	0702
RETAINER, AUTO. TRANS. OIL FILTER	0800	ROTOR, DISTRIBUTOR.	0601
RETAINER, AUTO. TRANS. OIL PAN SCREEN	0808	ROTOR, STEER. GEAR PUMP	1309
RETAINER, AUTO. TRANS. REAR PUMP VALVE SPRING.	0803	S	
RETAINER, AUTO. TRANS. REVERSE INTERLOCK VALVE SPRING.	0803	SADDLE, EXHAUST PIPE CLAMP.	0401
RETAINER, CHASSIS CABLES DASH GROMMET	0627	SADDLE, MUFFLER CLAMP	0402
RETAINER, CLUTCH RELEASE SHAFT.	0203	SCREEN, AUTO. TRANS. OIL FILTER	0808
RETAINER, ENGINE VALVE SPRING	0103	SCREEN, AUTO. TRANS. REAR PUMP RELIEF VALVE	0803
RETAINER, HEAD LAMP PARKING LAMP LENS	0617	SCREEN, CONVERTER HOUSING	0230
RETAINER, HOOD TOP ORNAMENT	1620	SCREEN, FUEL PUMP BOWL.	0301
RETAINER, INSTRUMENTS GLASS	1701	SCREW, AUTO. TRANS. REVERSE SERVO PRESSURE TAKE-OFF	0806
RETAINER, LICENSE PLATE LAMP LENS	0620	SCREW, CONNECTING ROD PISTON PIN CLAMP.	0107
RETAINER, LOWER CONTROL ARM INNER SHAFT BUSHING	1204	SCREW, CRANKSHAFT BEARING CAP	0105
RETAINER, OIL LEVEL GAGE TUBE	0115	SCREW, CYLINDER HEAD.	0102
RETAINER OR BEZEL, IGNITION SWITCH.	0602	SCREW, DIFFERENTIAL CARRIER BEARING CAP	1003
RETAINER, PROPELLER SHAFT SLEEVE GREASE WASHER.	0900	SCREW, ENGINE VALVE LIFTER ADJUSTING.	0103
RETAINER, REAR SPRING BUMPER.	1521	SCREW, ENGINE VALVE LIFTER COVER.	0103
RETAINER, SHOCK ABSORBER GROMMET.	1801	SCREW, ENGINE VALVE ROCKER ARM.	0103
RETAINER, STABILIZER SHAFT BUSHING.	1205		

ALPHABETICAL INDEX

S-Cont'd.	GROUP	S-Cont'd.	GROUP
SCREW, FOG LAMP FOCUSING	0631	SHAFT W/CORE, SPEEDOMETER	1716
SCREW, HEAD LAMP FOCUSING	0617	SHIELD, AUTO. TRANS. HAND CONTROL SELECTOR INDICATOR LAMP BULB	0850
SCREW, OIL FILTER COVER	0118	SHIELD, BRAKE PEDAL SPLASH	1507
SCREW, OIL PAN	0115	SHIELD, FUEL PUMP	0301
SCREWS, CARBURETER	0302	SHIELD, GENERATOR COMMUTATOR	0601
SCREW SHAFT, BENDIX DRIVE	0606	SHIELD, IGNITION SWITCH TERMINAL	0602
SEAL, AUTO. TRANS. MAIN SHAFT	0804	SHIELD, REAR FENDER GRAVEL	1604
SEAL, AUTO. TRANS. MULTIPLE DISC CLUTCH PISTON	0804	SHIELD, STARTER MOTOR COMMUTATOR	0606
SEAL, AUTO. TRANS. REAR PLANETARY CARRIER RING	0804	SHIELD AND CLAMP, TRANS. OVERDRIVE SOLENOID	0731
SEAL, AUTO. TRANS. REAR RING GEAR	0804	SHIM, CRANKSHAFT THRUST WASHER	0105
SEAL, AUTO. CHOKE HEATER TUBE COVER	0302	SHIM, FRONT FENDER	1601
SEAL, CRANKSHAFT REAR BEARING CAP	0105	SHIM, R/A PINION ADJUSTING	1005
SEAL, REAR FENDER FRONT GRAVEL DEFLECTOR	1604	SHIM, R/A PINION BEARING	1005
SEAL, STEER. GEAR CONTROL VALVE "O" RING	1302	SHIM, R/A SHAFT BEARING ADJUSTING	1002
SEAL, STEER. GEAR CONTROL VALVE TO CYLINDER PIPES ELBOW "O" RING	1308	SHIM, REAR FENDER	1604
SEAL, STEER. GEAR PUMP RING TO BODY AND COVER	1309	SHIM, REAR GRAVEL DEFLECTOR	1604
SEAL, STEER. GEAR PUMP TO CONTROL VALVE HOSE UNION "O" RING	1309	SHIM, STEER. GEAR CAM LEVER ADJ. SCREW	1306
SEAL, STEER. GEAR POWER CYLINDER ADAPTER "O" RING	1308	SHIM, STEER. GEAR HOUSING TOP COVER	1302
SEAL, STEER. KNUCKLE CONTROL ARM BUSHING	1204	SHIM, STEER. GEAR POWER CYLINDER RACK GUIDE	1308
SEAL, STEER. KNUCKLE TIE ROD END GREASE	1207	SHIM, STEER. MUCKLE	1202
SEAL, STEER. POST JACKET	1305	SHOE, AUTO. TRANS. GOVERNOR CONTROL SHAFT YOKE	0801
SEAL, STEER. REACH ROD END GREASE	1312	SHOE OR FORK, TRANS. GEARSHIFT LOW & REVERSE	0747
SEALED BEAM UNIT, FOG LAMP	0631	SHOE WITH LINING, BRAKE	1101
SEALED BEAM UNIT, HEAD LAMP	0617	SHOCK ABSORBER	1801
SEALED BEAM UNIT, SPOTLIGHT	0633	SHROUD, AUTO. CHOKE TO MANIFOLD PIPE	0302
SEAT, ENGINE VALVE SPRING	0103	SHROUD, AUTO. TRANS. OIL PAN SCREEN	0808
SEAT, SHOCK ABSORBER GROMMET	1801	SHROUD, FAN	0506
SEAT, STEER. POST JACKET BEARING SPRING	1305	SHROUD, INSTRUMENTS CLUSTER	1702
SERVO UNITS, AUTO. TRANS.	0806	SHUTTLE VALVE, AUTO. TRANS. REVERSE	0806
SHACKLE, REAR SPRING	1520	SIGNAL LIGHTS KIT, DIRECTIONAL	0621
SHAFT, AUTO. TRANS. GOVERNOR	0801	SLEEVE, ACCELERATOR PUSH ROD	0312
SHAFT, AUTO. TRANS. MAIN	0804	SLEEVE, CLUTCH OPERATING SHAFT	0206
SHAFT, AUTO. TRANS. PARKING BRAKE TOGGLE ARM	0801	SLEEVE, TRANS. GEAR SHIFT INTERLOCK	0747
SHAFT, CARBURETER CHOKE VALVE	0302	SLEEVE, TRANS. OVERDRIVE CONTROL GOVERNOR GEAR	0731
SHAFT, CARBURETER THROTTLE VALVE	0302	SLEEVE, TRANS. SECOND AND HIGH SYNCHRONIZER	0702
SHAFT, CLUTCH PEDAL	0205	SLEEVE AND TUBE, TRANS. OVERDRIVE CONTROL	0732
SHAFT, DIFFERENTIAL PINION	1004	SLINGER, CRANKSHAFT OIL	0105
SHAFT, DISTRIBUTOR	0601	SLINGER, GENERATOR DRIVE END PLATE	0608
SHAFT, DISTRIBUTOR DRIVE	0601	SLINGER, R/A PINION BEARING OIL	1005
SHAFT, ENGINE VALVE ROCKER ARM	0103	SLINGER, TRANS. PINION REAR BEARING OIL	0705
SHAFT, OIL PUMP DRIVE	0116	SLINGER, WATER PUMP SHAFT	0505
SHAFT, OIL PUMP IDLER GEAR	0116	SNAP RING, TRANS. MAIN SHAFT	0702
SHAFT, R/A	1002	SNAP RING, TRANS. OVERDRIVE RING GEAR	0721
SHAFT, REAR STABILIZER	1525	SNAP RING, TRANS. OVERDRIVE SHAFT BEARING	0721
SHAFT, STEER. GEAR CAM LEVER	1306	SNAP RING, TRANS. PINION BEARING	0705
SHAFT, STEER. GEAR PUMP DRIVE	1309	SNAP RING, UNIVERSAL JOINT CROSS BEARING	0901
SHAFT, STEER. KNUCKLE CONTROL ARM PIVOT	1204	SOCKET AND CABLE, BRIGHT LIGHT SIGNAL LAMP	1701
SHAFT, STEER. KNUCKLE CONTROL ARM STABILIZER	1205	SOCKET AND CABLE, HAND CONTROL SELECTOR INDICATOR LAMP	0850
SHAFT, TRANS. MAIN	0702	SOCKET AND CABLE, PARKING AND SIGNAL LAMP	0617
SHAFT, TRANS. OVERDRIVE	0721	SOCKET AND CABLE, PARKING LAMP	0617
SHAFT, TRANS. OVERDRIVE SHIFT	0725	SOCKETS AND CABLES, INSTRUMENTS PANEL	1701
SHAFT, TRANS. REVERSE IDLER GEAR	0704	SOCKET, DIRECTIONAL SIGNAL LIGHTS FLASHER	0621
SHAFT AND BEARING, WATER PUMP	0505	SOCKET, LICENSE PLATE LAMP BULB	0620
SHAFT AND GEARS, TRANS. MAIN	0702	SOLENOID, TRANS. OVERDRIVE	0731
SHAFT AND JOINT, PROPELLER	0900	SOLENOID VALVE, ANTI-CREEP	1106
SHAFT AND LEVER, AUTO. TRANS. CONTROL (THROUGH CASE)	0808	SPACER, AUTO. TRANS. FORWARD FW UNIT PLATE	0804
SHAFT AND LEVER, AUTO. TRANS. GOVERNOR CONTROL	0801	SPACER, CAMSHAFT TIMING GEAR	0104
SHAFT AND LEVER, AUTO. TRANS. HAND CONTROL	0850	SPACER, C/S POWER STEER. DRIVE PULLEY	0105
SHAFT AND LEVER, BRAKE AUXILIARY PEDAL	1108	SPACER, DISTRIBUTOR TIMER CAMSHAFT	0601
SHAFT AND LEVER, CLUTCH OPERATING	0206	SPACER, ENGINE FRONT SUPPORT INSULATOR	0101
SHAFT AND LEVER, CLUTCH PEDAL	0205	SPACER, FAN BLADE	0503
SHAFT AND LEVERS, CLUTCH RELEASE	0203	SPACER, FUEL PUMP OIL SEAL	0301
SHAFT AND SUPPORT, STEER. POST GEARSHIFT	0756	SPACER, HORN PUSH BUTTON	1310
SHAFT AND WORM, STEERING GEAR	1304	SPACER, LICENSE PLATE LAMP LENS	0619
SHAFT AND YOKE, PROPELLER	0900	SPACER, MANIFOLD HEATER VALVE	0109
		SPACER, RADIATOR CORE	0503
		SPACER, R/A PINION BEARING	1005
		SPACER, SHOCK ABSORBER	1801
		SPACER, STABILIZER SHAFT BOLT	1525

ALPHABETICAL INDEX

S-Cont'd.	GROUP	S-Cont'd.	GROUP
SPACER, BUMPER SUPPORT BAR	1803	SPRINGS, CARBURETER	0302
SPACER, STARTER MOTOR ARMATURE	0606	SPRING SET, DISTRIBUTOR TIMER WEIGHT	0601
SPACER, TRANS. GEAR CLUSTER BEARING ROLLERS	0703	SPRING WITH RETAINER, MASTER CYLINDER PISTON	1104
SPARK MODIFIER	0601	STARTER MOTOR	0606
SPARK PLUG	0603	STEERING GEAR ASSEMBLY	1301
SPEEDOMETER	1716	STOP, HAND BRAKE CONTROL PLUNGER	1116
SPLASHGUARD, FRONT FENDER LOWER PANEL TO BUMPER	1609	STOP, MANIFOLD HEATER VALVE BALANCE	0109
SPOTLIGHT ASSEMBLY	0633	STOP, MASTER CYLINDER PISTON	1104
SPRING, ACCELERATOR PULLBACK	0312	STRAINER, CARBURETER	0302
SPRING, AUTO. CHOKE HEATER TUBE COVER	0302	STRAINER, OIL	0116
SPRING, AUTO. TRANS. DIRECT DRIVE PAWL RELEASE ROCKER ARM TENSION	0801	STRAP, BATTERY GROUND	0630
SPRING, AUTO. TRANS. GOVERNOR CONTROL SHAFT YOKE RETURN	0801	STRAP, ENGINE GROUND	0630
SPRING, AUTO. TRANS. GOVERNOR TENSION	0801	STRAP, MASTER CYLINDER SIDE SUPPORT	1104
SPRING, AUTO. TRANS. HAND CONTROL SELECTOR LEVER RETURN	0850	STRAP, MUFFLER SUPPORT	0402
SPRING, AUTO. TRANS. MULTIPLE DISC CLUTCH RETRACTOR	0804	STRAP, OIL FILTER MOUNTING	0118
SPRING, AUTO. TRANS. VALVE BLOCK SELECTOR VALVE DETENT BALL	0803	STRAP, OUTLET PIPE HANGER	0403
SPRING, BENDIX DRIVE	0606	STRIP, FRONT BUMPER GRILLE BAR COVER	1807
SPRING, BENDIX DRIVE PINION	0606	STRUT, AUTO. TRANS. BRAKE BAND	0807
SPRING, BENDIX DRIVE SCREW SHAFT	0606	STRUT, CLUTCH TOGGLE LEVER	0202
SPRING, BRAKE PEDAL PULLBACK	1108	STUD, CLUTCH PEDAL PULLBACK SPRING ANCHOR	0204
SPRING, BRAKE SHOE ANCHOR	1101	STUD, IGNITION DISTRIBUTOR TERMINAL	0601
SPRING, BRAKE SHOE RETURN	1101	STUD, WHEEL HUB	1402
SPRING, BRAKE SHOE SELF ADJUSTING LEVER WEDGE	1101	SUN GEAR AND LOW BRAKE DRUM, AUTO. TRANS. FRONT	0804
SPRING, BRAKE SHOE TIP AND HOLDER	1101	SUN GEAR, AUTO. TRANS. REAR	0804
SPRING, CLUTCH PEDAL PULLBACK	0204	SUPPORT, AUTO. TRANS. HAND CONTROL SELECTOR LEVER	0850
SPRING, CLUTCH PRESSURE PLATE	0202	SUPPORT, BACK-UP LAMP SWITCH BRACKET	0632
SPRING, CLUTCH RELEASE BEARING COLLAR	0203	SUPPORT, CARBURETER AIR CLEANER	0303
SPRING, CLUTCH TOGGLE LEVER ANTI-RATTLE	0202	SUPPORT COMPLETE, IGNITION DISTRIBUTOR	0601
SPRING, CROSS SHAFT TO CARBURETER ACTUATING	0312	SUPPORT, EXHAUST PIPE	0401
SPRING, DISTRIBUTOR CAP RETAINER	0601	SUPPORT, FUEL PUMP	0301
SPRING, DISTRIBUTOR TIMER WEIGHT	0601	SUPPORT, HORN BRACKET	0625
SPRING, DISTRIBUTOR TIMER WEIGHT GOVERNOR CONTROL	0601	SUPPORT, IGNITION DISTRIBUTOR	0601
SPRING, ENGINE VALVE	0103	SUPPORT, JACK	1812
SPRING, ENGINE VALVE LIFTER	0103	SUPPORT, MUFFLER	0402
SPRING, ENGINE VALVE ROCKER ARM	0103	SUPPORT, OIL FILTER CARTRIDGE	0118
SPRING, FRONT	1510	SUPPORT, OUTLET PIPE HANGER	0403
SPRING, FUEL PUMP DIAPHRAGM	0301	SUPPORT, PROPELLER SHAFT	0902
SPRING, FUEL PUMP ROCKER ARM	0301	SUPPORT, RADIATOR CORE	0503
SPRING, GAS FILLER DOOR	1604	SUPPORT, SHOCK ABSORBER LOWER	1801
SPRING, GENERATOR BRUSH	0608	SUPPORT, STEER. GEAR PUMP	1309
SPRING, HAND BRAKE CABLE ANCHOR	1110	SUPPORT, STEER. KNUCKLE LOWER CONTROL ARM TO KING PIN	1204
SPRING, HAND BRAKE CONTROL PLUNGER ANTI-RATTLE	1116	SWITCH, ANTI-CREEP SOLENOID VALVE CONTROL	1106
SPRING, HOOD LOCK LATCH LEVER PULLBACK	1622	SWITCH, ANTI-CREEP SOLENOID VALVE PRESSURE	1106
SPRING, HOOD TIE ROD	1620	SWITCH, AUTO. TRANS. STARTER CUT-OUT	0850
SPRING, HOOD TOP HINGE	1620	SWITCH, BACK-UP LAMP	0632
SPRING, HOOD TOP LIFT	1622	SWITCH, DIRECTIONAL SIGNAL LIGHTS	0621
SPRING, HORN PUSH BUTTON	1310	SWITCH, FOG LAMP	0631
SPRING, HUB COVER RETAINING	1402	SWITCH, HEAD LAMP FOOT DIMMER	0615
SPRING, NOROL VALVE OPERATING ROD	1105	SWITCH, IGNITION	0602
SPRING, OIL PRESSURE RELIEF VALVE	0117	SWITCH, INSTRUMENT LAMP	0615
SPRING, REAR	1518	SWITCH, LIGHTING AND INSTRUMENT	0615
SPRING, SIGNAL LIGHTS SWITCH PLATE TENSION	0621	SWITCH, LIGHTING SWITCH	0615
SPRING, SPARK MODIFIER	0601	SWITCH, SPOTLIGHT	0633
SPRING, STARTER MOTOR BRUSH	0606	SWITCH, STARTER	0607
SPRING, STEER. GEAR CONTROL VALVE CENTERING	1302	SWITCH, STOP LAMP	0615
SPRING, STEER. GEAR PUMP PRESSURE CONTROL VALVE	1309	SWITCH, TRANS. OVERDRIVE ACCELERATOR KICKDOWN	0731
SPRING, STEER. POST JACKET BEARING	1305	SWITCH, TRANS. OVERDRIVE CONTROL LOCKOUT	0731
SPRING, STEER. POST GEARSHIFT SHAFT	0756	SWIVEL, GEARSHIFT ROD	0760
SPRING, TRANS. FREE WHEELING CLUTCH ROLLER RETAINER	0722	SWIVEL, THROTTLE CONTROL BELLCRANK TO CARBURETER ROD	0312
SPRING, TRANS. GEARSHIFT INTERLOCK	0747	SWIVEL, THROTTLE CONTROL CROSS SHAFT TO CARBURETER ROD	0312
SPRING, TRANS. OVERDRIVE SHIFT RAIL	0725	SWIVEL, TRANS. OVERDRIVE CONTROL	0732
SPRING, WATER PUMP INLET HOSE REINFORCING	0507	SWITCH KIT, BACK-UP LAMP	0632
SPRING, WHEEL BRAKE CYLINDER PISTON	1103	SYNCHRONIZER, TRANS. SECOND AND HIGH	0702

T

TANK, GASOLINE	0307
TAPPET, ENGINE VALVE	0103

ALPHABETICAL INDEX

T-Cont'd.	GROUP	V-Cont'd.	GROUP
TEE, BRAKE PIPE	1107	VALVE, MANIFOLD HEATER.	0109
TERMINAL, DISTRIBUTOR TO COIL CABLE	0603	VALVE, MASTER CYLINDER.	1104
TERMINAL, SPARK PLUG CABLE.	0603	VALVE, OIL PRESSURE RELIEF.	0117
TERMINAL, TRANS. OVERDRIVE CABLE.	0601	VALVE, STEER. GEAR CONTROL VALVE PUMP BY-PASS.	1302
TERMINAL, TRANS. OVERDRIVE CABLE.	0731	VALVE, STEER. GEAR HYDRAULIC CONTROL.	1302
THERMOSTAT, ENGINE.	0504	VALVE AND FORK, AUTO. TRANS. GOVERNOR	0801
THERMOSTAT, MANIFOLD HEATER VALVE	0109	VALVE ASSY., STEER. GEAR PUMP PRESSURE CONTROL.	1309
THRUST BEARING, STEERING KNUCKLE.	1203	VALVE BLOCK, AUTO. TRANS.	0803
THRUST BLOCK, R/A SHAFT	1002	VALVE WITH LEVER, NOROL	1105
THRUST PLATE, CAMSHAFT TIMING GEAR.	0104	VANE, STEER. GEAR PUMP ROTOR.	1309
THRUST WASHER, AUTO. TRANS. FRONT PLANETARY CARRIER.	0804	VERTICAL BUMPERS.	1807
THRUST WASHER, AUTO. TRANS. REAR PLANETARY CARRIER FRONT.	0804	VOLTAGE REGULATOR, GENERATOR.	0608
THRUST WASHER, AUTO. TRANS. FRONT RING GEAR	0804		
THRUST WASHER, AUTO. TRANS. FRONT SUN GEAR.	0804	W	
THRUST WASHER, AUTO. TRANS. REAR SUN GEAR	0804	WASHER, CAMSHAFT TIMING GEAR COVER.	0104
THRUST WASHER, BENDIX DRIVE	0606	WASHER, CLUTCH OPERATING SHAFT BEARING.	0206
THRUST WASHER, CRANKSHAFT	0105	WASHER, DISTRIBUTOR DRIVE SHAFT SPACING	0601
THRUST WASHER, DISTRIBUTOR SHAFT.	0601	WASHER, DISTRIBUTOR DRIVE SHAFT SPRING.	0601
THRUST WASHER, DIFFERENTIAL PINION.	1004	WASHER, ENGINE VALVE ROCKER ARM SPRING.	0103
THRUST WASHER, DIFFERENTIAL SIDE BEVEL GEAR	1004	WASHER, FRONT WHEEL FELT.	1408
THRUST WASHER, OIL PUMP DRIVE SHAFT	0116	WASHER, FRONT WHEEL BEARING LOCK.	1407
THRUST WASHER, STARTER MOTOR ARMATURE	0606	WASHER, GENERATOR DRIVE END PLATE FELT.	0608
THRUST WASHER, TRANS. COUNTERSHAFT GEAR CLUSTER.	0703	WASHER, OIL LEVEL GAGE TUBE	0115
TIP AND HOLDER, BRAKE SHOE SELF ADJUSTING	1101	WASHER, PROPELLER SHAFT SLEEVE GREASE	0900
TOOLS	1812	WASHER, R/A PINION OIL SLINGER WICK/OR.	1005
TOP, HOOD	1620	WASHER, R/A SHAFT BEARING OUTER OIL	1002
TORQUE CONVERTER.	0220	WASHER, STEER. POST GEARSHIFT SHAFT	0756
TORQUE CONVERTER HOUSING.	0230	WASHER, STEER. GEAR CAM LEVER SHAFT OIL	1306
TRANSMISSION ASSEMBLY, AUTO.	0800	WASHER, BUMPER SUPPORT BAR.	1805
TRANSMISSION ASSEMBLY, STANDARD AND OVERDRIVE.	0700	WASHER, TRANS. GEAR CLUSTER BEARING ROLLER SPACER.	0703
TRANSMISSION CASE	0701	WASHER, UNIVERSAL JOINT CROSS BEARING	0901
TRANSMISSION OVERDRIVE HOUSING.	0720	WASHER, WATER PUMP IMPELLER SEAL.	0505
TUBE, AUTO. TRANS. MAINSHAFT OIL TRANSFER	0804	WASHER AND RETAINER, FRONT WHEEL FELT	1408
TUBE, BACKING PLATE BRAKE CABLE GUIDE	1102	WASHER AND RETAINER, R/A SHAFT BEARING OUTER OIL.	1002
TUBE, ENGINE BREATHER	0102	WATER PUMP.	0505
TUBE, HAND BRAKE REAR CABLE PROTECTING.	1110	WEDGE, BRAKE SHOE SELF ADJUSTING LEVER.	1101
TUBE, OIL LEVEL GAGE.	0115	WEIGHT, DISTRIBUTOR TIMER	0601
TUBE, OIL PAN FILLER.	0115	WEIGHT, WHEEL BALANCE	1402
U		WELT, REAR FENDER	1604
U BOLT OR CLIP, REAR SPRING	1522	WEATHERSTRIP, HEAD LAMP TO FENDER	0617
UNION, BRAKE PIPE	1107	WHEEL	1402
UNION, GASOLINE TANK TO FUEL PUMP PIPE.	0308	WHEEL BRAKE CYLINDER.	1103
UNION, STEERING GEAR PUMP TO CONTROL VALVE HOSE	1309	WHEEL, STEERING	1310
V		WING, HOOD TOP ORNAMENT	1620
VALVE, CARBURETER CHOKE	0302	WING NUT, SPARE WHEEL	1413
VALVE, CARBURETER THROTTLE.	0302	WINGUARD, BUMPER.	1809
VALVE, ENGINE EXHAUST	0103	WRENCH, WHEEL SOCKET.	1812
VALVE, ENGINE INLET	0103		
VALVE, FUEL PUMP.	0301	Y	
		YOKE, AUTO. TRANS. GOVERNOR CONTROL SHAFT	0801
		YOKE, UNIVERSAL JOINT SLIP.	0901